

Mouth (Cover for batteries replacement)
Remove this cover when replacing batteries.

Microphone Mouthpiece. Speak through this microphone mouthpiece bringing your lips close to it.

Sound Volume Control. The volume of amplified sound increases when this control is turned clockwise.

Whistle/siren

Press-to-talk power Press this switch for announcing.

Grip.

Carrying Strap.

Specifications:

Power Source: 6, *AA*UM-3 Battery(not supplied).

Battery life: Approx 8 hours (talk)
Approx 40 minutes (Continuous Signaling)

Audible Range: 0.5km-0.7km (depending on operating conditions).

Dimensions & Weight: Mouth diameter 150mm
Length 237mm Weight 620g.

Operating Instructions

When Making Announcement:

1. Hold the megaphone at the grip and press the trigger switch with your index finger.
2. Position the Megaphone towards the object, and speak through the microphone mouthpiece. Bring the microphone close to your lips and speak with a clear, normal voice.
3. Turn the sound volume control at the back of the grip, and adjust the sound level to optimum without causing howling.

Battery Loading

- 1 Remove the battery case and put in six type AA (UM-3) batteries with correct polarity
2. After putting the batteries in, insert the battery case into the battery compartment of the megaphone with correct polarity.
- 3 Refit the battery cover

Push N press down loosen

If unable to insert, turn upside down.

upside
↑
Under side
↓

Put batteries in as shown.

Cautions

1. Be sure to put the batteries in with correct polarity
2. When the megaphone is not for use for a long period remove the batteries.
3. Drained batteries do not give sufficient sound volume. Replace batteries at regular intervals.